


Connecting Your Tablet to the Flex Printer


Follow these steps to connect your tablet to the Flex printer.

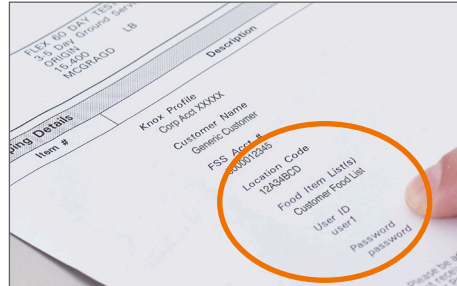


Visit Google Play or the Apple App Store to **install the Prep-n-Print Flex App**.

Your customized Customized Location Code, Username and Password can be found on the packing list.


1. Open the app; **accept/allow permissions** if requested in pop-ups.

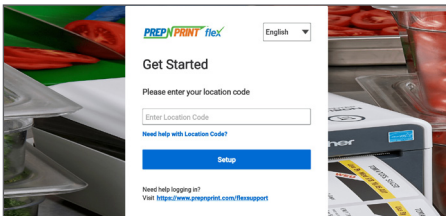

2. Enter the **Location Code** for your location.


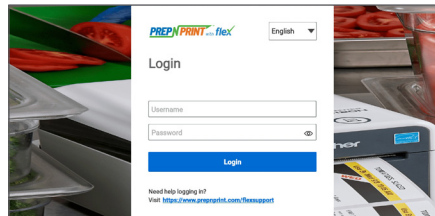


3. **Enter your assigned user name and password.** You may also set the language in which to view the mobile app.

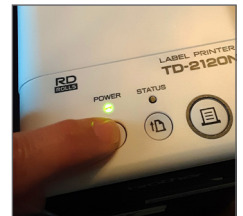


4. Plug in and **turn on the printer**

5. **Pair your mobile device to the Flex Printer.**

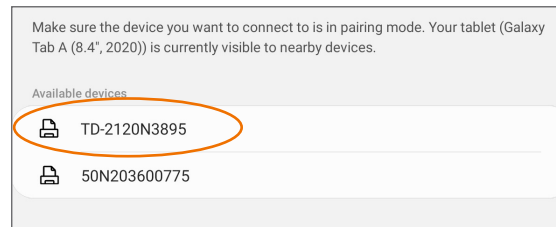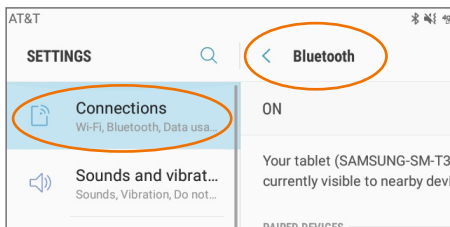


- A. Go to **device settings**.
- B. Ensure you have a network connection (Wi-Fi or cellular).
- C. Locate and **turn on Bluetooth**.

- D. **Locate the Flex Printer by looking for the Brother printer serial number beginning with TD-2120N.**
If you have more than one Flex Printer, use the last several digits of its serial number (found on the underside of the printer) to select the desired printer.

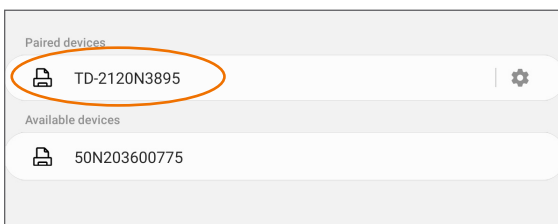


- E. The device will move up to "**Paired Devices**" (Android) / "**My Devices**" (iOS).
- F. **Close device settings.**



In the Flex app you land on your paired & configured printers

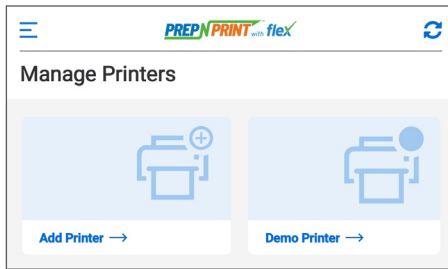


6. Tap "Add Printer".

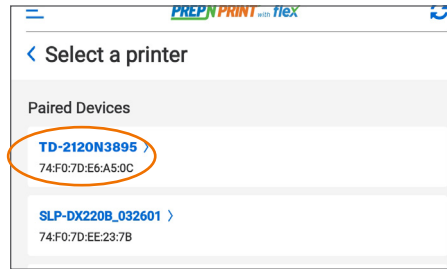

7. Locate and select the **Printer**.

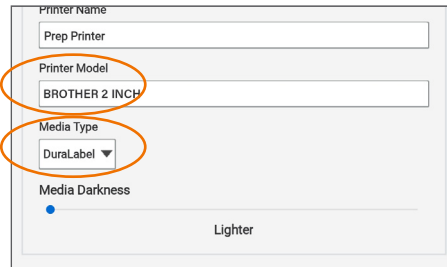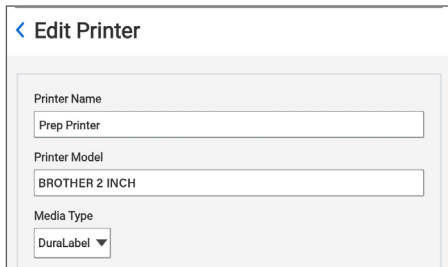


iOS Note: if for any reason the Printer is not connected when entering the App, the "Select a printer" page will be blank. You must return to device settings to re-establish a connection.

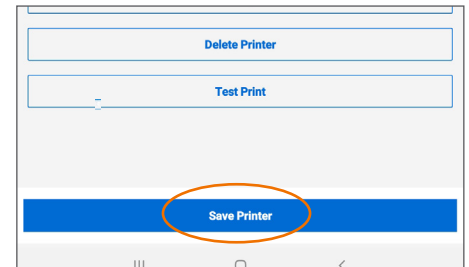


8. By default


- A. Your printer model/serial number is populated in the Printer Name field, but **you can edit it**.
- B. In the Printer Model field, confirm that Brother 2 Inch is set as the default.
- C. Select the **Media Type** that matches the Flex Labels you purchased. **See your label package.**
- D. **No need to adjust Media Darkness.** Default matches your selected Media Type. If subsequently labels are too light or too dark, you can return to this page to adjust this setting.
- E. Select the **Save Printer** button before hitting the Back Arrow or Home Button.

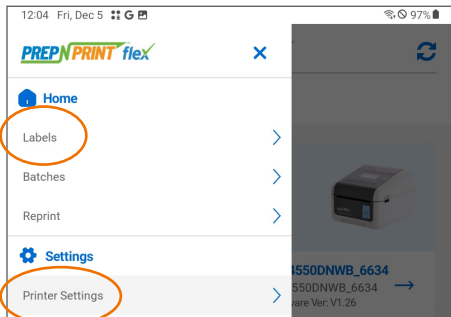

9. **If you have another Flex Printer**, use the **side bar menu** located in the top right to return to "Printer Settings". Otherwise, tap the settings button to view other settings or the Labels button to start labeling.

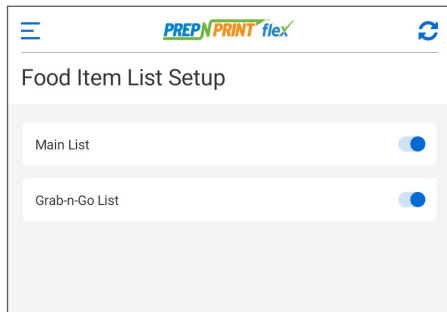

10. Tap on "Food Management" to view food lists assigned to your location. By default, all assigned lists are turned on but may be temporarily turned off.

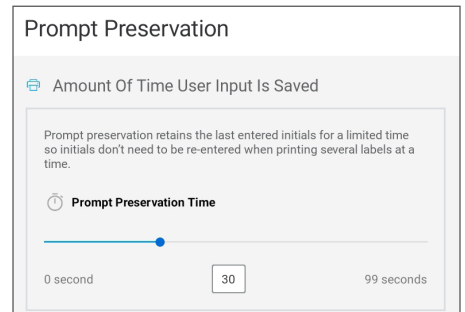

11. Tap "Prompt Preservation" to set a limited time in which initials entered on the last label are retained for future use on the next label.